



General Electric Bagel Switch 4 Slice Bottom Plate Replacement

In this guide you will learn how to replace the bottom of the toaster if it happens to break while you have your toaster

Written By: Jacqueline Tran





TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Screws](#) (1)

Step 1 — Disassembling General Electric Bagel Switch 4-Slice Toaster Outer Case



⚠ Unplug the toaster.


Step 2



- Remove the two levers and four dials by pulling them out directly towards you.


ⓘ Removing these components may require some force, but they will release.

Step 3

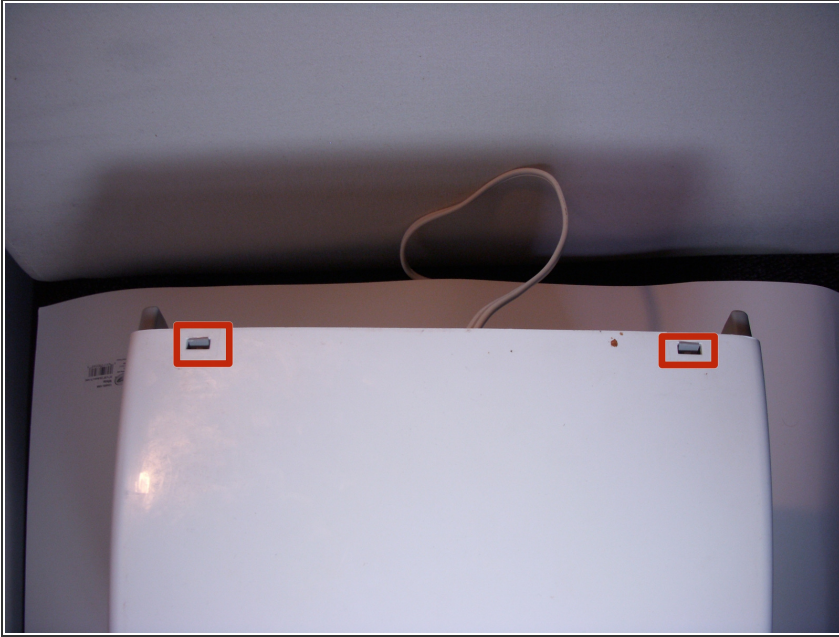


- Carefully remove the top part of the toaster casing.
- Disconnect the small plastic clips on the back of the toaster.

Step 4 — Bottom Plate

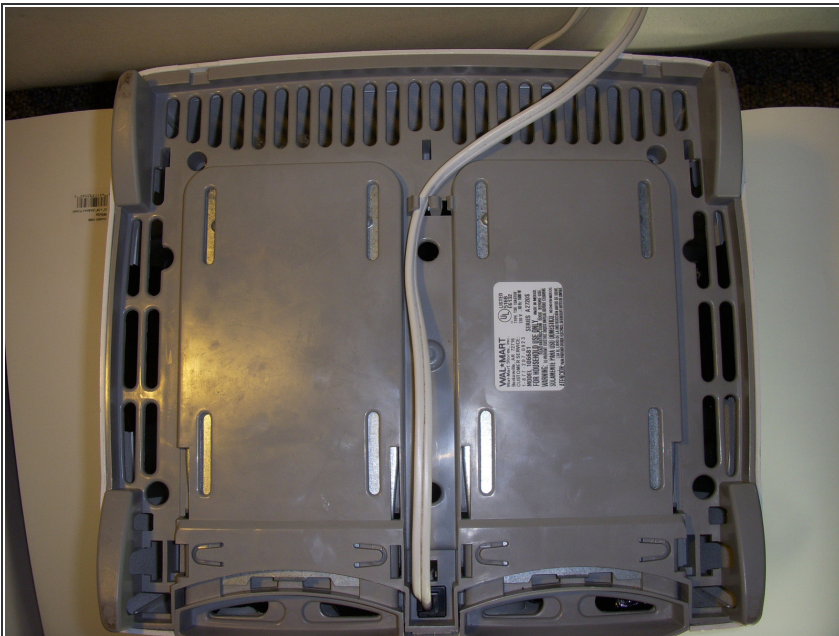


- Turn the toaster over so the bottom is on top or 180 degrees.

Step 5

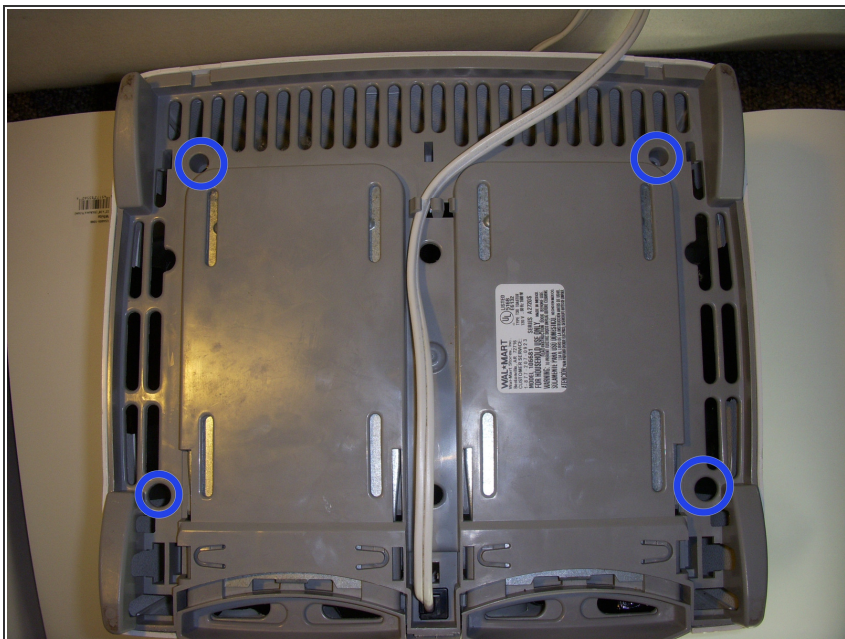

- Locate the screws that are holding the bottom plate onto the toaster. There is four (4) screws you need to locate and are near the corners.

Step 6

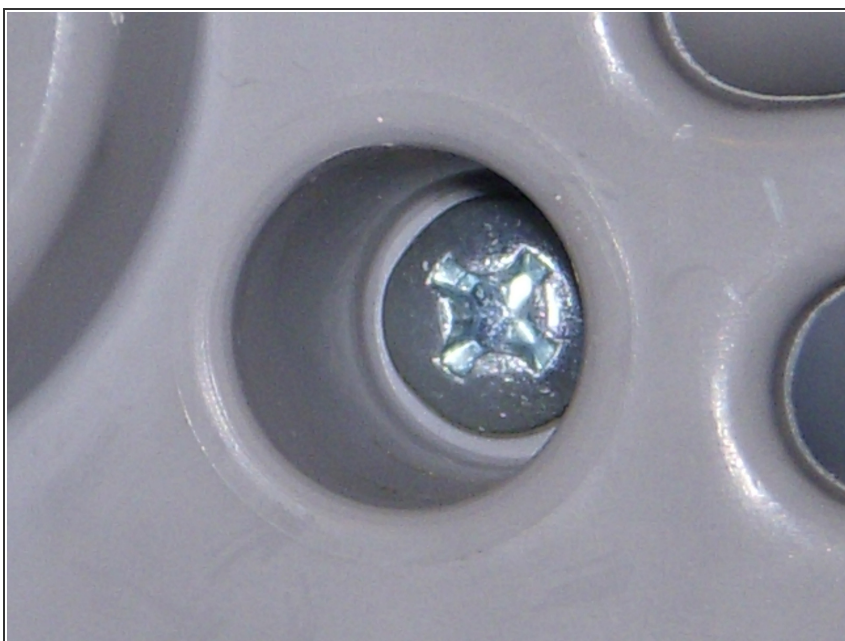

- With a screwdriver, remove all four of the screws so that there is nothing holding the bottom plate onto the toaster.

Step 7




- You will notice that the bottom is also attached to the cord. You will need to disconnect it from the cord in order to remove it fully.

Step 8



- Now that the bottom plate is fully off you can put the new one on. Start by running it around the cord and make sure it is lined up correct. You don't want to take it off because its on backwards.

Step 9

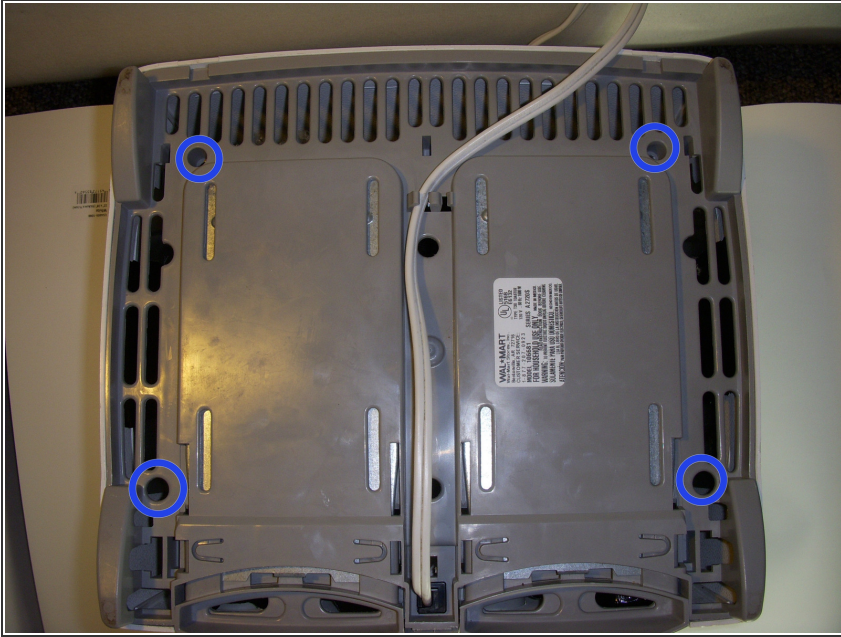

- Now that you have the bottom plate in place, it is time to put the four screws that hold it on back in. Once these screws are in you have finished replacing the bottom plate!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-07 12:15:29 AM.